



Power

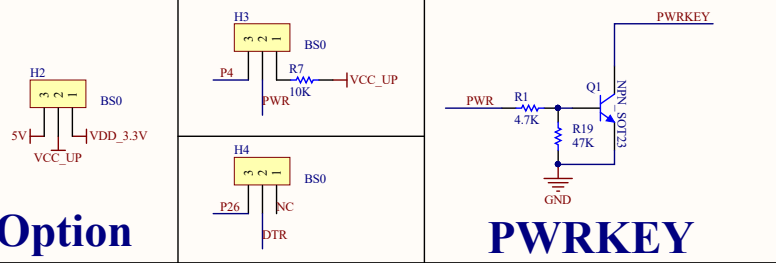


Option

PWRKEY

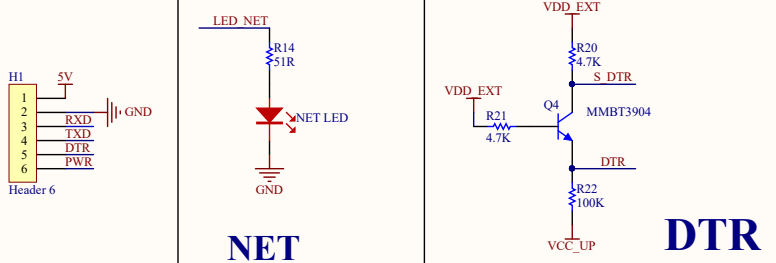


NET


DTR

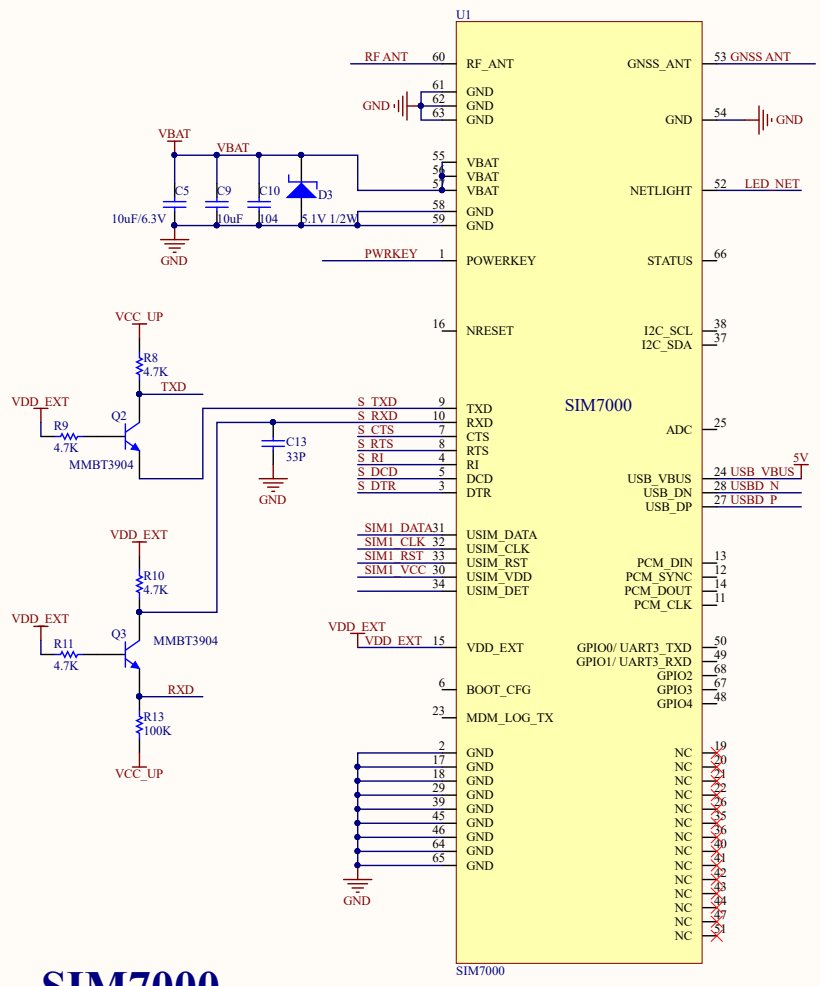


SIM7000

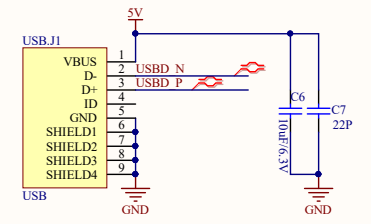

USB

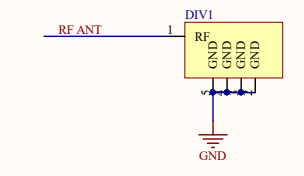


LTE ANT

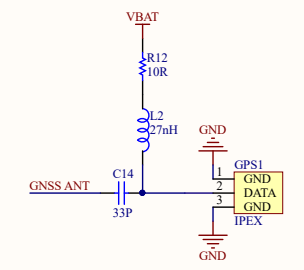

GNSS ANT

Antenna

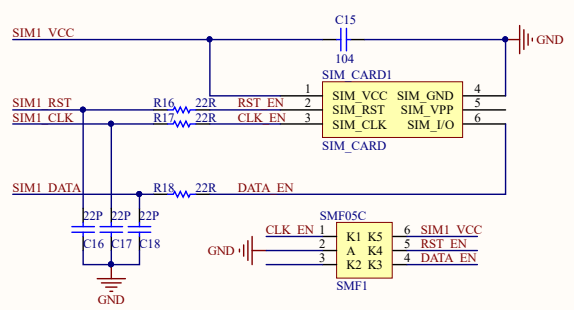

SIM_CAR

BCMW/P1	P1	BCMW/P1
1	1	2
3	2	3
4	3	4
5	4	5
6	5	6
7	6	7
8	7	8
9	8	9
10	9	10
11	10	11
12	11	12
13	12	13
14	13	14
15	14	15
16	15	16
17	16	17
18	17	18
19	18	19
20	19	20
21	20	21
22	21	22
23	22	23
24	23	24
25	24	25
26	25	26
27	26	27
28	27	28
29	28	29
30	29	30
31	30	31
32	31	32
33	32	33
34	33	34
35	34	35
36	35	36
37	36	37
38	37	38
39	38	39
40	39	40

Raspberry Interface

SIM7000X NB-IoT HAT